


BSides ROC Badge Hacking

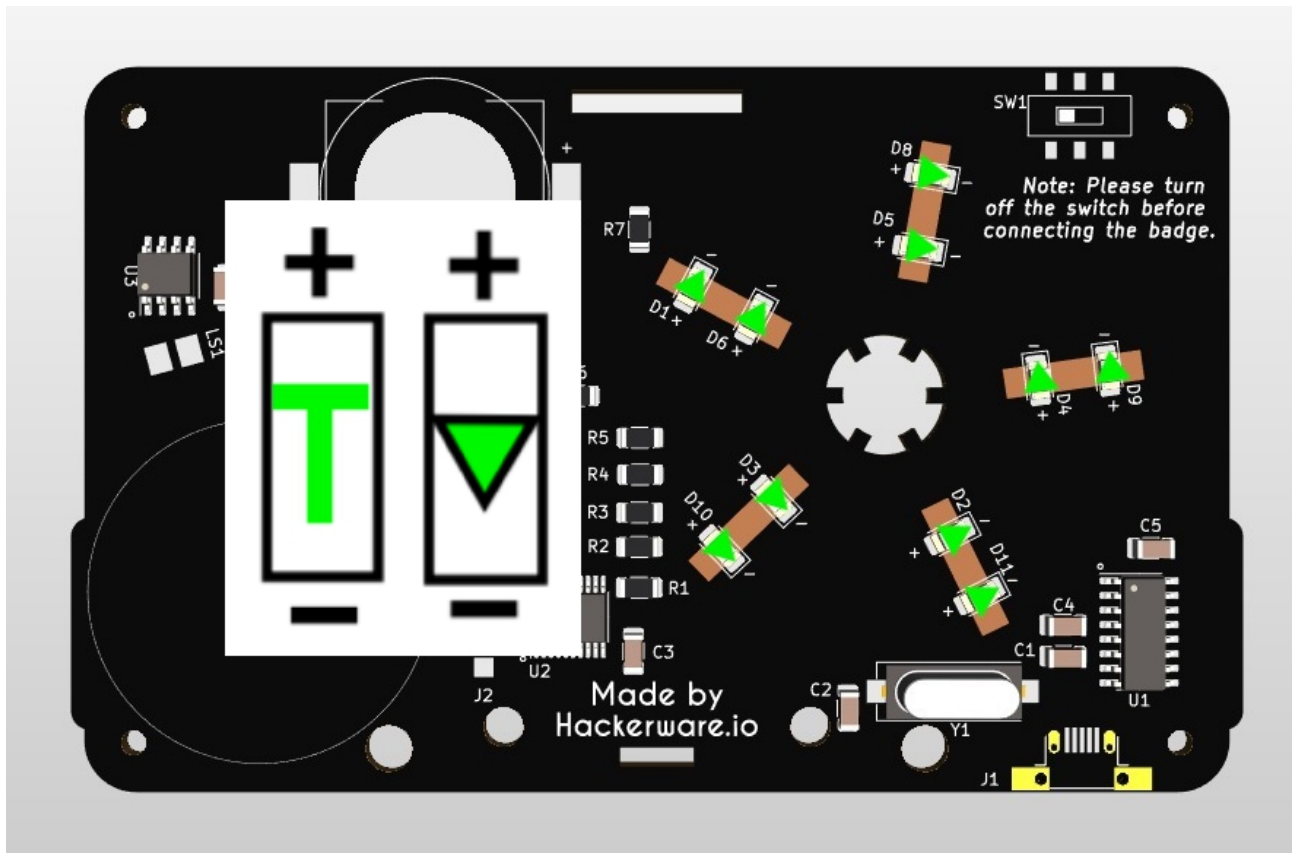

Soldering instructions:

1. Solder LEDs upside down in the given polarity.
2. Solder one side of the pad first.
3. Melt the first pad and gently touch the LED.
4. Solder the other side.

Badge CTF Instructions

1. Download Arduino IDE 1.8.x version.
2. Turn OFF the badge using switch on the backside.
3. Connect the badge to system using micro-USB cable.
4. Select the correct port (*Tools > Port*) and open Serial Monitor (*Tools > Serial Monitor*).
5. In the Serial Monitor, select the baud rate at **9600 baud** and **Both NL & CR**.
6. Type ******* to start the CTF.
7. Type your first flag to play the CTF.

